




Canon PowerShot S80 Flash Replacement

Written By: BrettH

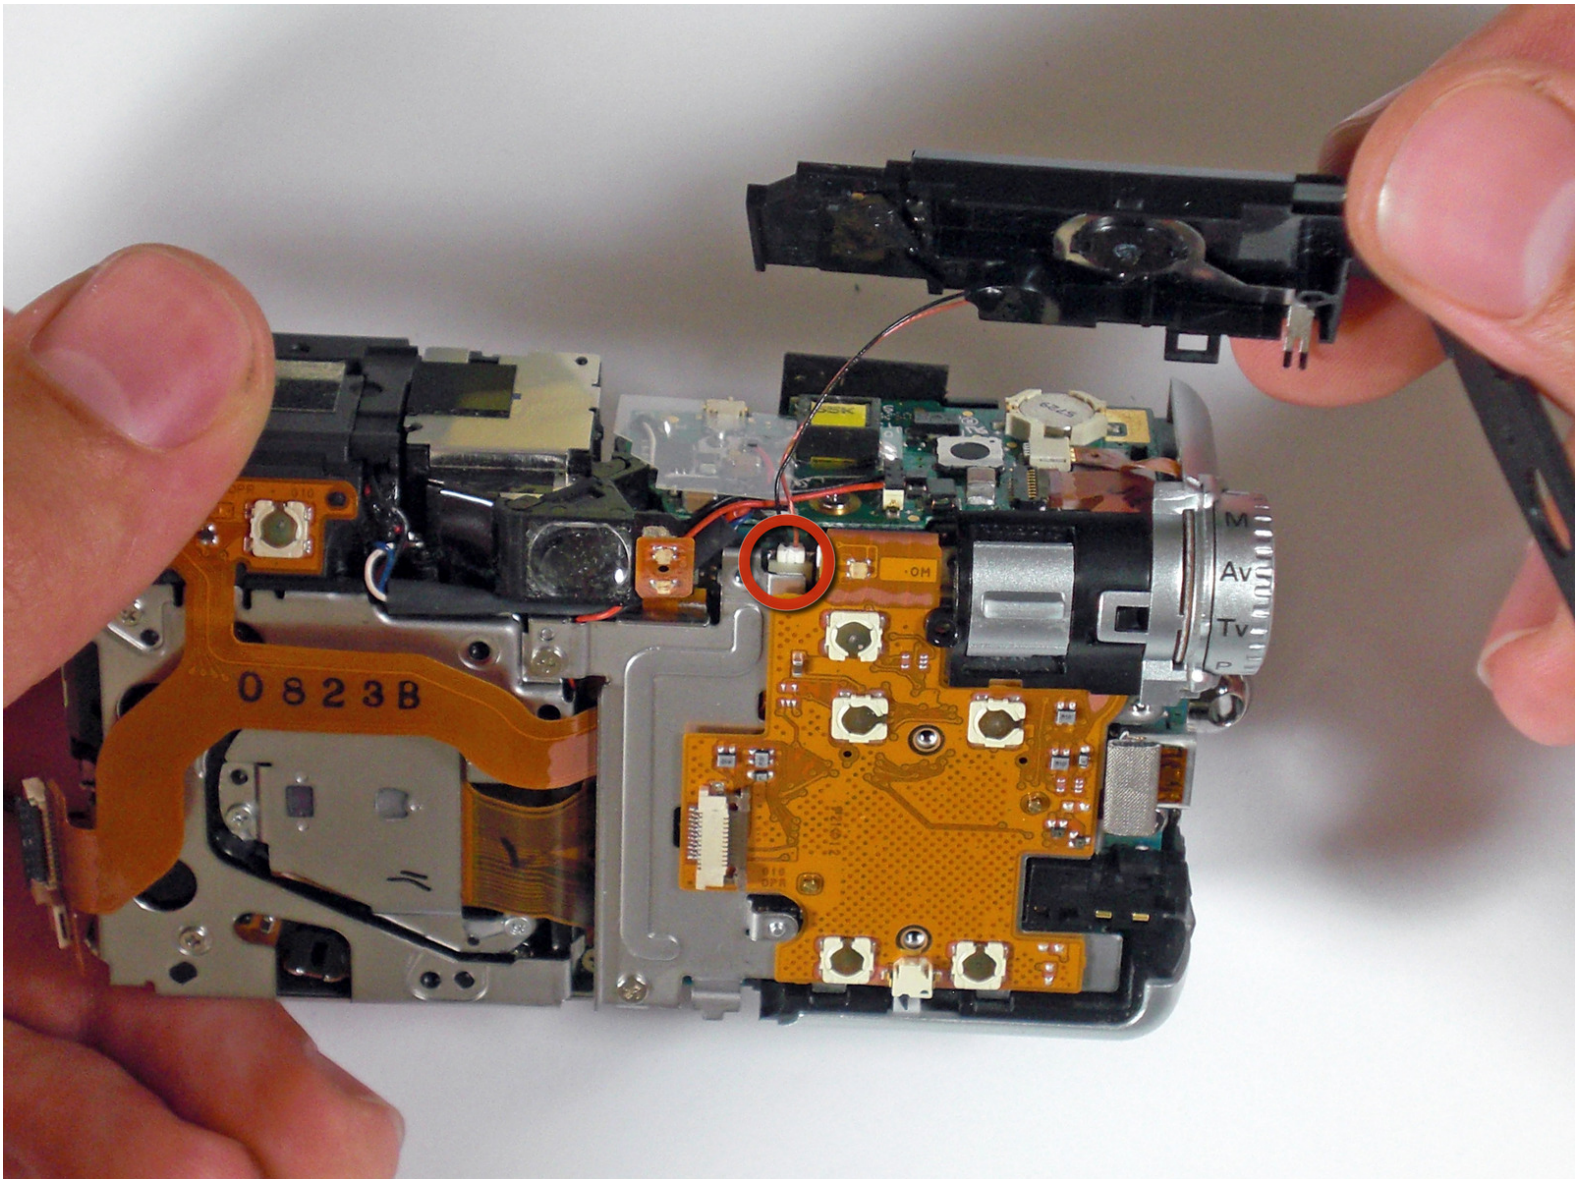

INTRODUCTION

This guide serves to replace a faulty flash mechanism.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Outer Casing




- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.

Step 2




- Remove all screws from sides of outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.

Step 3

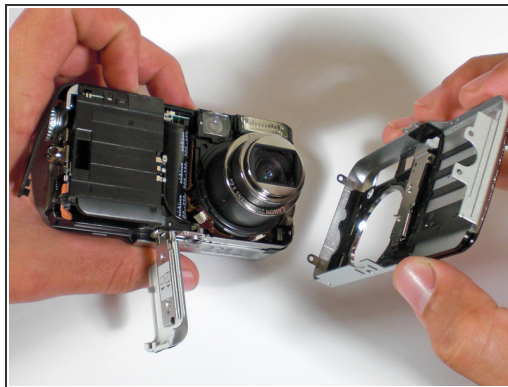


- Gently pull the front cover off the camera.

Step 4

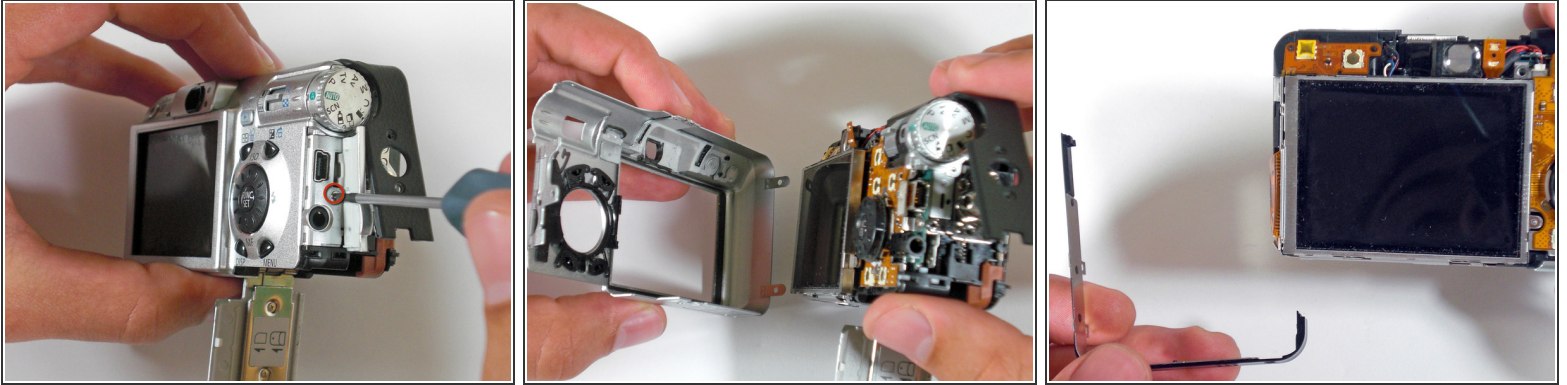



- Open the "A/V Out Digital" cover slide, and remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

Step 5 — LCD Screen

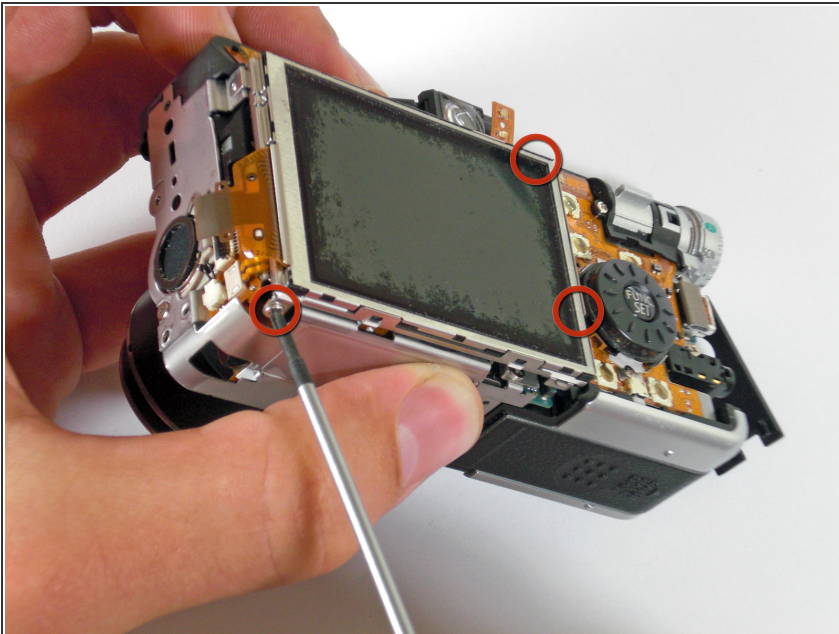


- Remove the three screws that are holding the screen in place and free the screen from the underlying components.
- ⚠ Be careful of the ribbon wire that is still attached on the left of the screen.

Step 6

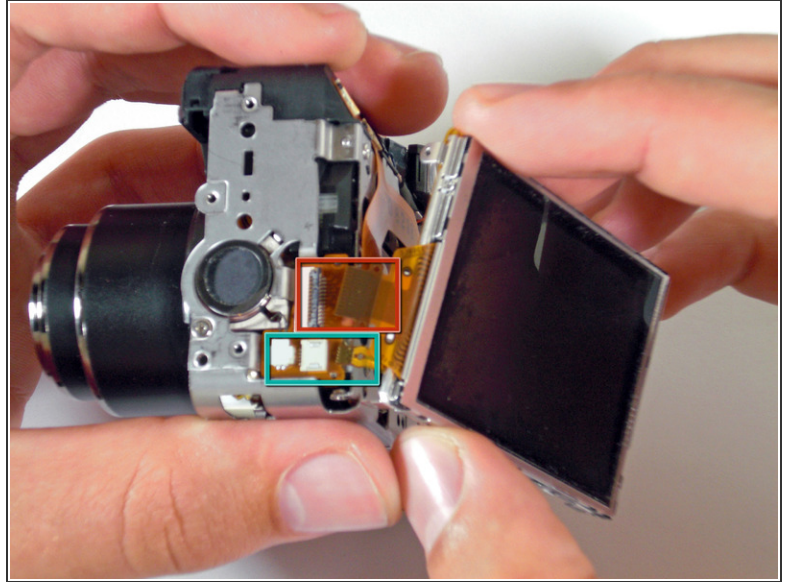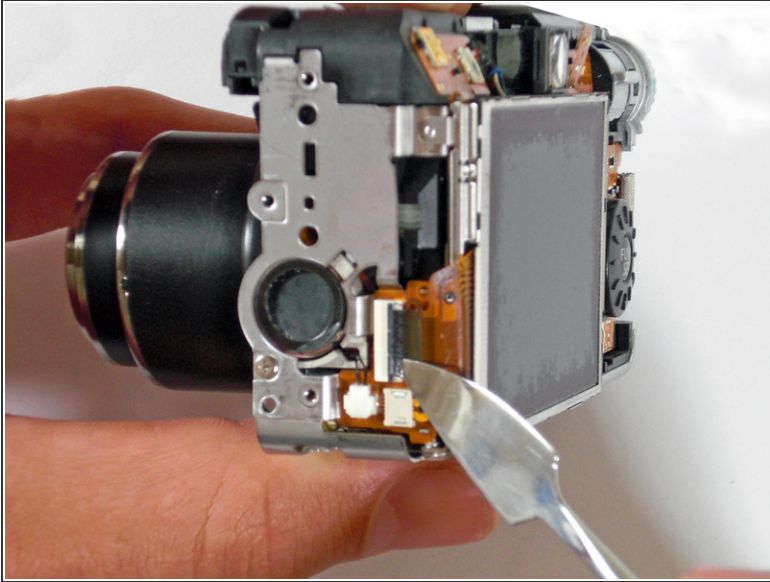



- With the spudger, gently lift the black flap that is holding the wide ribbon cable wire in place.
- Unplug the wide ribbon cable.
- Unplug the narrow ribbon cable to free the LCD screen from the camera body

Step 7 — Flash

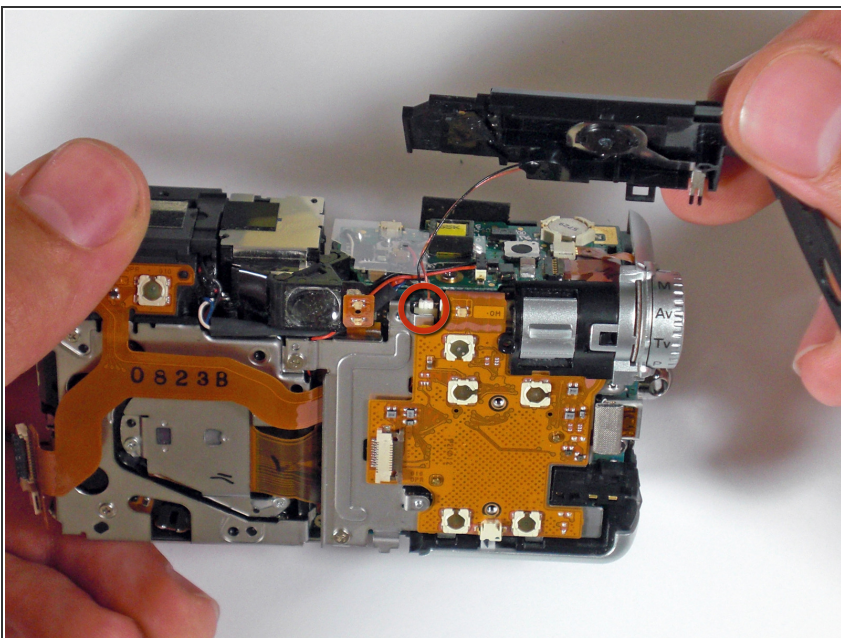


- Remove the L-shaped corner trim containing the picture button.
- Carefully unplug the connection cable attached.

Step 8

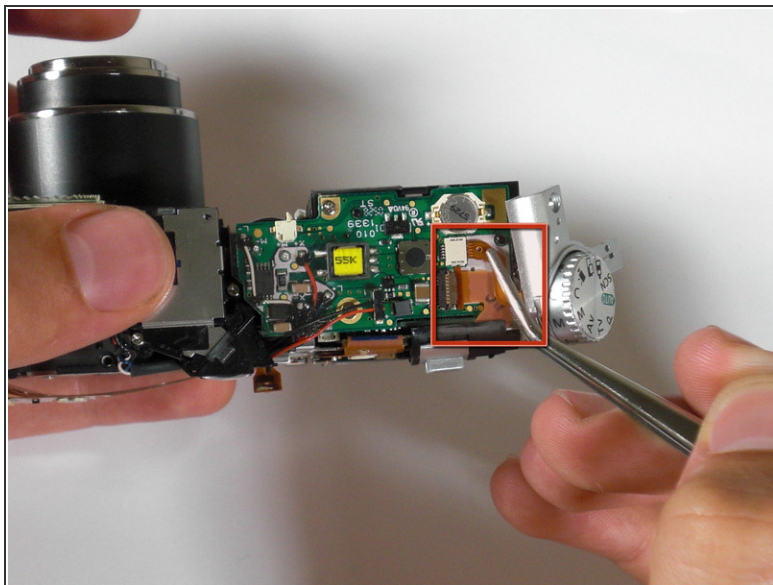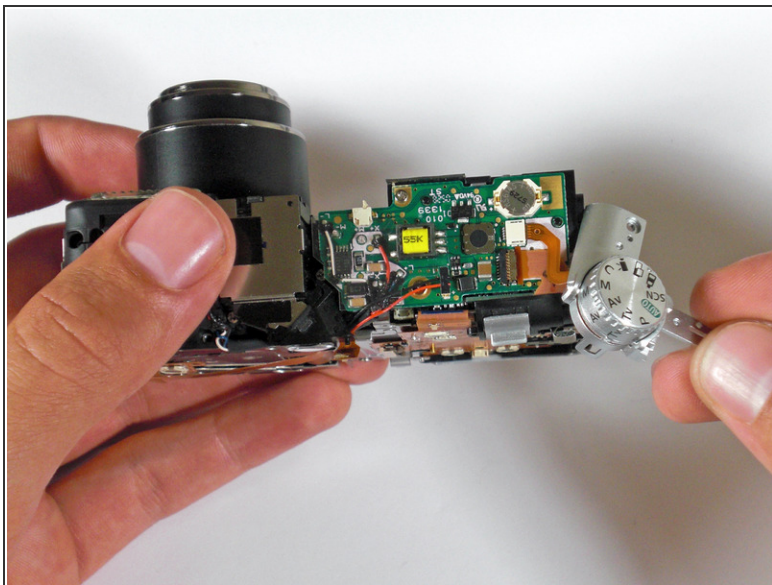


- Pull the selector wheel from the top corner of the camera.
- With a set of tweezers, carefully remove the ribbon cable connection.

Step 9

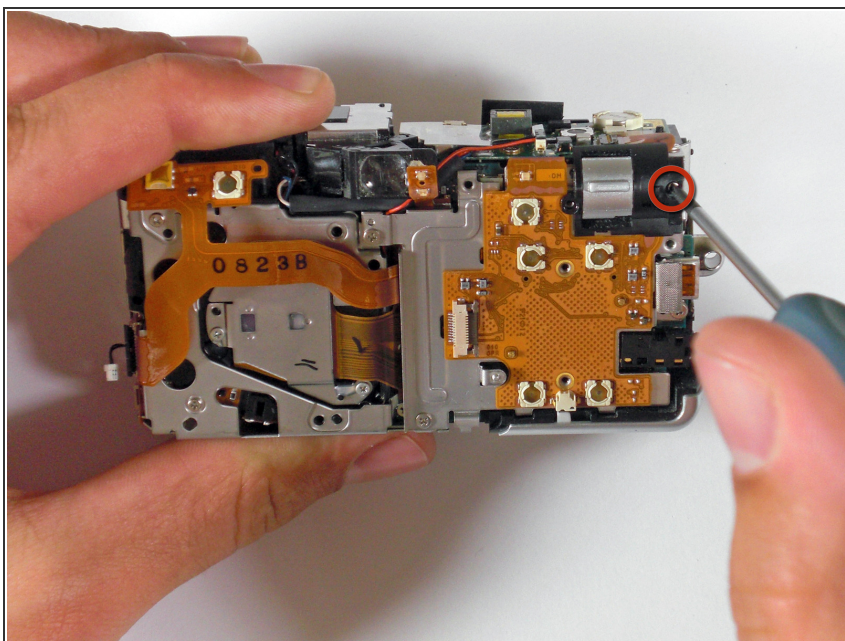


- Unscrew the zoom toggle switch and remove.

Step 10

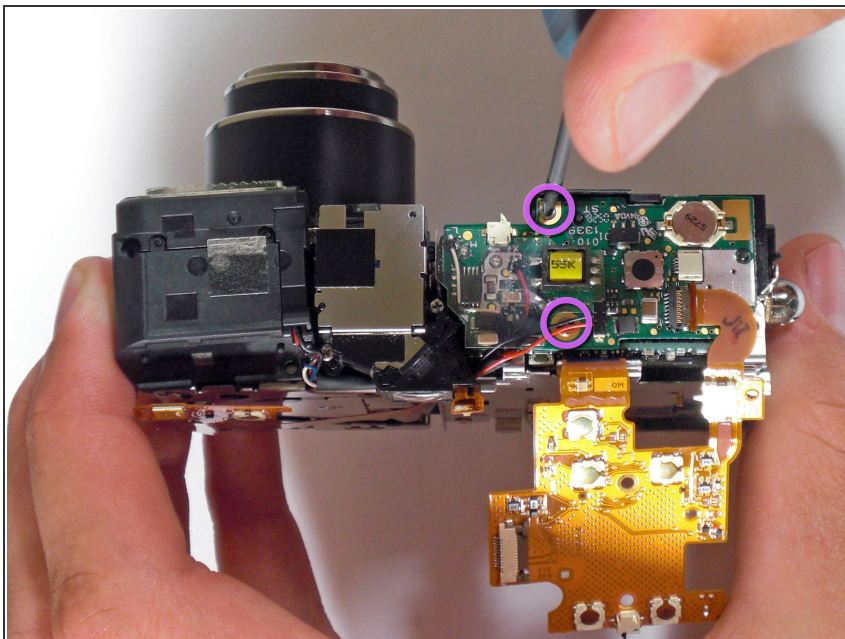


- Unscrew the flash board.

Step 11

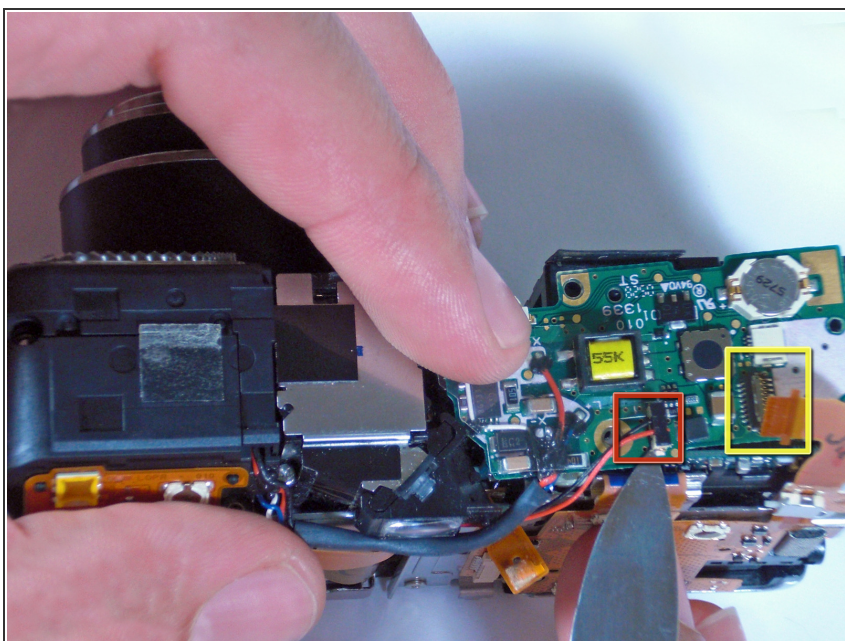



- With a metal spudger, gently pry up and remove the cable connection.
- With a metal spudger, gently lift up black tab to remove ribbon cable.

Step 12

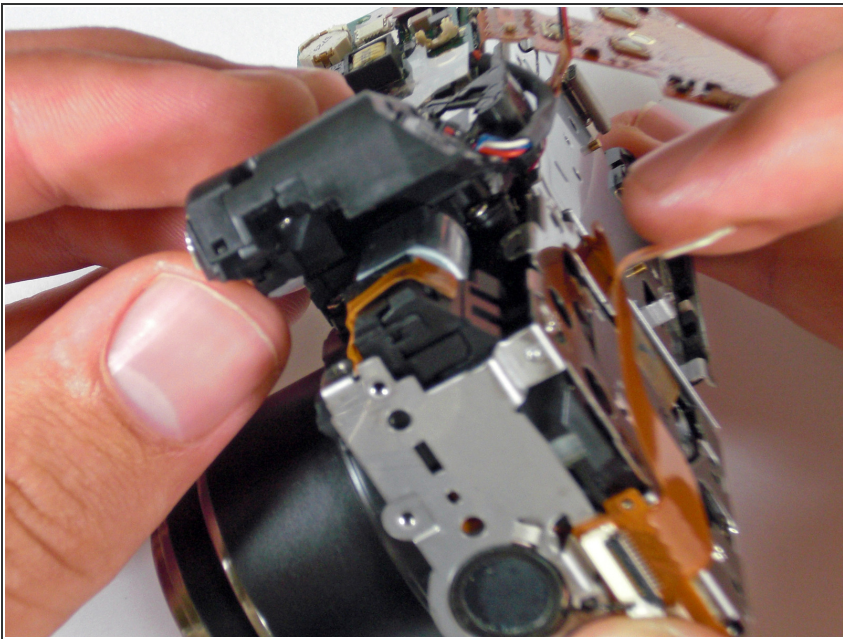

- Lift the flash bulb unit from the camera.

Step 13

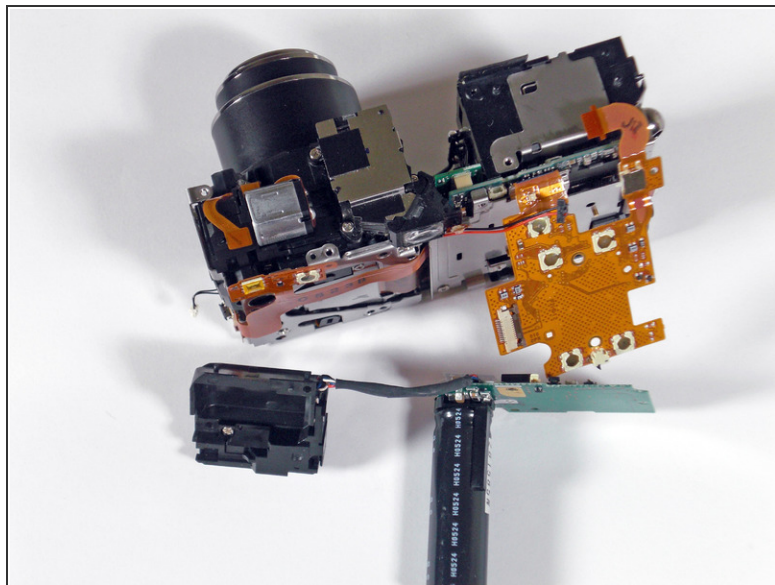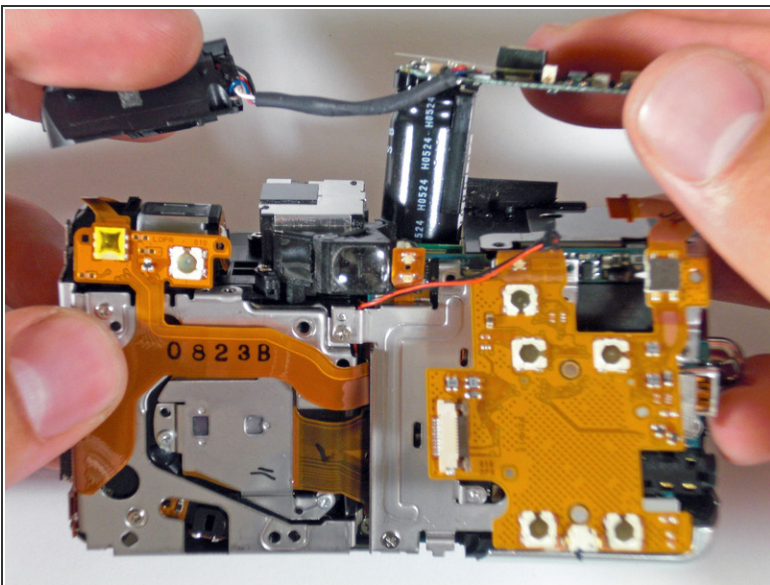

- Lift the entire three-part flash assembly from the camera.

To reassemble your device, follow these instructions in reverse order.

